



Spare Parts List TACMET w/ Rotor Assy P/N 101990/101688

ITEM	QTY.	PART NO.	DESCRIPTION	
1	1.0	101680	ROTOR ASSY, TACMET	
2	1.0	501029	VANE SLEEVE	
3	1.0	101695	VANE ASSEMBLY	
4	1.0	101705	COMPASS HOUSING	
5	2.0	501004	GROUND PLANE 1	
6	2.0	101692	WIND PICK-UP BLADE ASSEMBLY	
7	2.0	501003	GROUND PLANE 2	
8	1.0	101682	SHAFT ASSY, TRANSDUCER COLUMN	
9	2.0	ULKZ4008X-48-6/12	BEARING	
10	1.0	500975	END BRACKET, STATOR PLATE	
11	1.0	500983	COLUMN, TRANSDUCER ASSEMBLY	
12	1.0	Q1-12	RING RETAINER	
14	1.0	500985	SHAFT ASSY, TRANSDUCER COLUMN	
15	0.0	SS1-9	SHIM .004 THL	
16	1.0	Q2-12	RING RETAINER	
17	4.0	SC10-32	BRASS TIP SET SCREW 4-40 X 1/8	
18	1.0	102036	P.C.B. WIRING ASSY. TACMET	
19	1.0	101685-1	WIND DIRECTION BOARD ASSY	
20	1.0	101686-1	QUADRATURE BOARD ASSY	
21	1.0	H23A1	I. R. EMITTER/DETECTOR PAIR	
22	1.0	RN55C2742F	RES 27.4K 1% 1/10W	
23	1.0	101696-1	WS, TEMP, RH, POWER SUPPLY BD.	
24	2.0	101786	OUTPUT CABLE ASSY. TRANSDUCER	
25	1.0	101702	PROBE ASSY. R.H. ASSY.	
26	1.0	101704	TEMPERATURE PROBE ASSY.	
27	1.0	PS8X10X0.20	SPACER	
28	1.0	.264X.032X70S	O-RING	
29	2.0	ULZ10016X-48-6/12	BEARING	
30	1.0	501328	SHIELD PLATE B	
31	1.0	501327	SHIELD PLATE A	
32	1.0	101684	SHUTTER ASSEMBLY	
33	1.0	3.487- X.103-60BN	O-RING	
34	1.0	501414	HANDLE, TACMET MODIFIED	
35	1.0	ULKZ10016CX-48-6//12	BEARING	
36	1.0	WSR-8	RETAINING RING	
37	2.0	500997-1	SEAL WASHER	



38	1.0	101701	CAP ASSEMBLY, RH SLEEVE	
39	1.0	501102	TEMP PROBE SUPPORT SLEEVE	
40	1.0	3.465X.118-40BN	O-RING, TOP COVER	
41	5.0	APC40R-16A-TT	AIR TRANSDUCER	